

What to do if...

What to do if...



A tire punctures

P. 493

If you have a flat tire



The engine does not start

P. 502

If the engine will not start

P. 88

Engine immobilizer system

P. 508

If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 503

If the shift lever cannot be shifted from P



The display on the engine coolant temperature gauge flashes

P. 511

If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 504

If you lose your keys



The battery runs out

P. 508

If the vehicle battery is discharged



The doors cannot be locked

P. 46

Doors



The horn begins to sound

P. 90

Alarm



The vehicle is stuck in mud or sand

P. 514

If the vehicle becomes stuck



A warning light or indicator light comes on

P. 469

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light

or



P. 469



Malfunction indicator lamp

or



P. 470



ABS warning light

or



P. 470



Driver's seat belt reminder light

P. 472



Front passenger's seat belt reminder light

P. 472



Low fuel level warning light

P. 472



Master warning light

P. 472



SRS warning light

P. 470



Electric power steering system
warning light

P. 470



Open door warning light

P. 472



Pre-collision system warn-
ing light

P. 470



Charging system warning
light

P. 470



Tire pressure warning light

P. 472



Slip indicator

P. 470



A warning message is dis-
played

P. 479

If a warning message is displayed